

Hickory Ridge Building

Crestron Touch Panel



Instructional Media publication: 190

8/7/2017

= Tip = Caution

Introduction

The updated rooms in the Hickory Ridge building use the Crestron Touch Panel to control the projectors and audio visual equipment in the room. This document will provide an example of how to interact with the touch panel for the renovated rooms in the Hickory Ridge building.

| TABLE OF CONTENTS |
|--|
| Activate the Crestron Control Panel |
| Select Your Source |
| Select Your Destination |
| Blanking the Projector |
| Adjust the Volume Levels |
| Turn the System or Display Devices Off |

Activate the Crestron Control Panel

1. Press the control panel to wake it up (Fig 1,1).

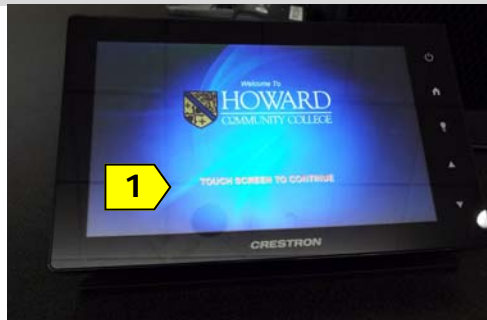


Fig 1

Select Your Source

The Home screen provides a list of sources that are available in the classroom. These sources will vary depending on the room type. In this image, from a 2 display classroom, you may choose to display the following sources (Fig 2):

- Computer (the instructor's PC)
- Laptop VGA (a cable to connect other devices such as an additional laptop)
- Laptop HDMI (a cable to connect media that uses this type of connection like an extra DVD player)
- Doc Cam
- Air Media

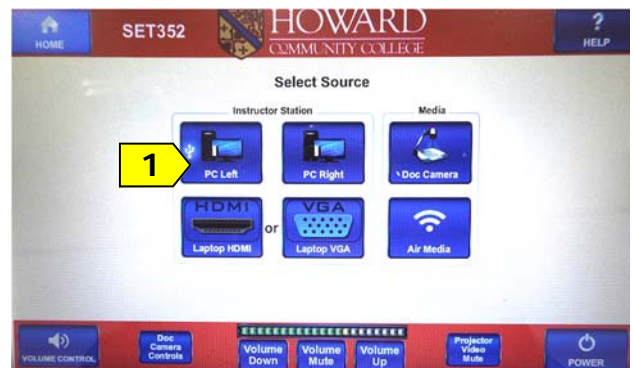


Fig 2

1. Press your desired source (Fig 2, 1). (For this example the left computer monitor has been selected.)

Select Your Destination

1. Press your desired projector (Fig 3,1).
2. Press Go (Fig 3,2).

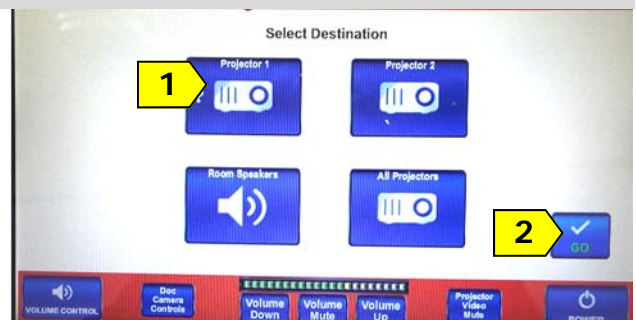


Fig 3

Blanking the Projector

The **Projector Video Mute** button allows you to temporarily blank the projector screen.

1. Press the **Projector Video Mute** button at the bottom of the Crestron Touch Screen. *The projector will stop projecting the selected source and the button will appear pale blue (Fig 4,1).*
2. Press the **Projector Video Mute** button again to resume displaying the projector (Fig 4,1).



Fig 4

Adjust the Volume Levels

1. Press **Room Speakers** (Fig 5,1) to set sound.
2. Check the volume in the computer and the video presented.
3. In the Crestron Touch Screen, press **Volume Up** (Fig 6,1) to increase the volume, and **Volume Down** (Fig 6,2) to decrease the volume. To **mute** the speakers press **Volume Mute** (Fig 6,3).

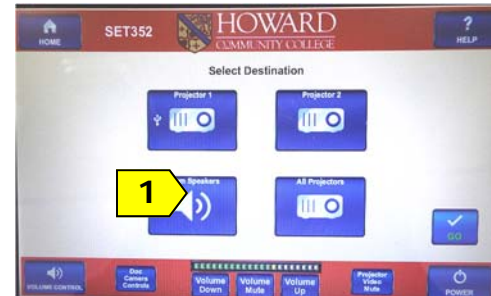


Fig 5



Fig 6

Turn the System or Display Devices Off

1. Press the **Power** button in the lower right corner of the Crestron Touch Screen (Fig 7,1).
2. Press the **Power Off** button for the desired **Projector** to turn off **only** the selected projector (Fig 7,2).
3. To turn off the entire system and raise the projection screen, press the **Yes** button (Fig 7,3).

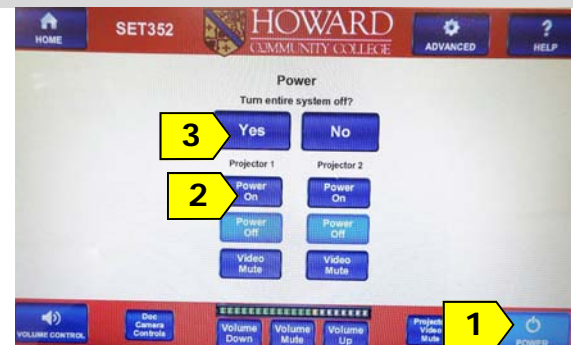


Fig 7

NEED MORE HELP?

Contact: AV Design Services, 443-518-4819, or email IMFacultyLab@howardcc.edu