



=Tip = Caution

Introduction

The SMARTBoard is an interactive, touch screen that allows users to manipulate images, annotate, and interact with their computer. The screen also serves as a substitute for a traditional projection screen. This document explains how to turn on and annotate the SMARTBoard in CL155.

SMARTBoard Vocabulary

Interactive devices, such as the SMARTBoard and its associated software, have terminology that may be new to some users. Here is a list of some common terms.

Annotate— to write notes atop an existing image or text

Capture— to copy what is currently displayed on the screen as an image

Floating Toolbar— an organized palette of onscreen tools that may be moved

Eraser— the tool used to remove annotations from the image

Gesture— a hand movement that can invoke a procedure, such as rubbing a fist on the board to erase annotations

Interactive—an exchange between the user and the device

Pen— the SMART pens only write in digital ink. They are the ONLY writing implements to be used with the SMARTBoard

SMART Ink—a software application that allows users to annotate on any window or other software application

Touch screen—a device whose screen images and icons may be manipulated by the user touching it directly with a SMART pen or their own hand

TABLE OF CONTENTS

Introduction

SMARTBoard Vocabulary

Turning on the SMARTboard

Write On the Desktop with the SMART Pens

Close a SMART Ink Note

Turn Off the SMARTBoard and Projector

Turning On The SMARTBoard

1. Turn on your computer by pressing its **Power** button.
2. Press the **Power** button on the **SMARTBoard (Fig 1,1)**.
3. Turn on the associated projector by pressing the **ON** button on the **mediatech console (Fig 2,1)**.



Fig 1



Fig 2

Write On the Desktop with the SMART Pens

1. With the SMARTBoard, projector and computer on, pick up a pen from the SMARTBoard pen tray below the SMARTboard screen (Fig 3,1) and begin writing on the board. Your ink will fade in atop a notepad image (Fig 4) .



Fig 3

IMPORTANT: DO NOT WRITE ON THE SMARTBOARD WITH ANYTHING OTHER THAN THE SMART Pens. NO DRY ERASE MARKERS. THEY WILL DAMAGE THE BOARD!

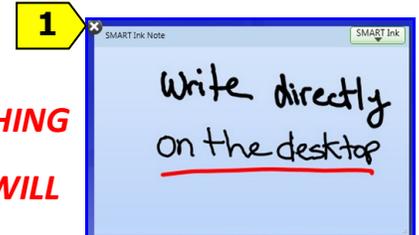


Fig 4



Fig 5

Close a SMART Ink Note

1. Click the **Close** button on the note (Fig 4, 1) .

Turn Off the SMARTBoard and Projector

1. Press the **Power** button on the SMARTBoard (Fig 6, 1) .The SMARTBoard is now off.



Fig 6

2. **Turn off** the associated projector by pressing the **OFF** button on the mediatech console (Fig 7, 1) . The Projector is now powering down.



Fig 7

Need More Help?

Contact IMFacultyLab@howardcc.edu or call Amy Chase Martin (x4848)